



Battery:

Lâg BlueWave guitars are equipped with a 2200 mAh, 3.7V / 8.14Wh Lithium Ion LYS 18650 battery. This battery is housed in a compartment under the guitar.

1. Charge the battery directly in the guitar (recommended): connect an AC adapter to the USB-C socket located near the jack using the supplied cable (USB-C to USB-A). A red indicator light allows you to visualize the battery charging.

2. Use an external charger: you can also extract the lithium battery to charge it in your own external charger, press the circle with the Lâg logo to extract the compartment.

User Manual

Smart Guitar Preamp

BLUEWAVE Preamp

Settings:

- 1. VOL / POWER :** Volume potentiometer for the piezo pickup | Pre-amp on/off switch
- 2. MIC / BT logo:** Volume potentiometer for the internal microphone* | Bluetooth on/off switch
- 3. ROOM/HALL & DELAY:** Depth potentiometer for the reverb effect / Delay time potentiometer

Quick Start:

a. Switch ON the pre-amp: Press the VOL/POWER button for 3 seconds to switch ON the BlueWave pre-amp. A blue led will turn on when the system is operating.

Effects may take up to 3 additional seconds to begin to turn ON.

b. Adjust the overall volume: turn the VOL/POWER potentiometer.

c. Adjust the effects parameters: Turn the ROOM/HALL knob to adjust the length of the reverb. Turn the DELAY knob to adjust the delay time.

d. Connect with Bluetooth: Press the MIC / BT logo button once to switch ON or OFF the BlueTooth mode. A purple light will light up next to the blue light, it will flash until a device is paired and then stay constant once connected. PLEASE NOTE, the volume of the signal received by your Lâg BlueWave guitar can only be adjusted on your device (phone, tablet, computer, etc.) and not on your guitar.

e. Amplification: you can amplify your Lâg BlueWave guitar by connecting a ¼ mono jack to the jack output located near the strap clip. WARNING, it will be necessary to turn on the pre-amp to obtain a signal and thus amplify your guitar.

f. Adjust the volume of the condenser microphone: your Lâg BlueWave guitar is not only equipped with a piezo sensor located under the bridge saddle but also with a condenser microphone housed in the pre-amp, in the guitar, to provide more warmth and acoustic tone. Adjust the volume of this sensor by rotating the MIC* potentiometer.

* The sound from this microphone is sent through the output jack, turning this potentiometer will only have an audible effect with an amp connected.