



# LAG MICRO

## User Manual

Preamp for Acoustic Guitar & Ukulele

### LÂG MICRO Preamp for Acoustic Guitar & Ukulele



#### 1 Power On/Off

The MICRO-LAG turns on automatically when the output cable is connected. It turns off automatically when the output cable is removed.

#### 2 Volume

Turn the **VOL.** knob to adjust the overall volume.

#### 3 Equalization

The MICRO-LAG features a **2-band EQ**. Adjust the **BASS** slider to control the low frequencies and the **TREB.** slider for the high frequencies.

#### 4 Tuner

Press the **TUNER** button to turn ON/OFF the tuner. The output is muted when the tuner is active.

When the tuner is on and a string is played, indicator lights will illuminate. The tuner will automatically detect the played note and display the closest pitch using a light signal, along with the string's position relative to that note.

Example:

- The played string is close to a **D** but slightly **flat**.

- The played string is close to a **D** but slightly **sharp**.

- The played string is perfectly in tune (**D**).



#### 5 Battery Replacement

When the **LOW BATT.** indicator lights up, please replace the battery as soon as possible. The battery compartment is located behind this cover:

